



Splice Guide

Uncovered Locking Eye Splice For coreless ropes

1

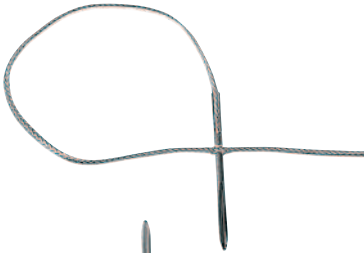

2

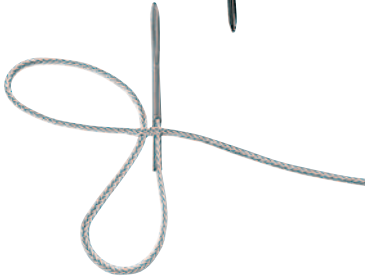

3



4



5



6



7



1. Multiply the diameter of the rope by 50 and mark this measurement from the end of the rope, leave a gap for twice the required eye size and insert the fid and pull end of rope through until it reaches the mark. (Pic 1)
2. Then insert the fid again approximately two plaits down in the opposite direction and repeat this operation twice. (Pic 2)
3. Lay loose end alongside main rope and make a mark approx. 8cm from end of tail. Insert loose end into splicing fid and insert fid at the last tuck and push through the centre of the rope, to emerge at your mark. (Pic 3)
4. From the tail end of the rope, mark six successive plaits in one direction and a further six successive plaits in the opposite direction. These can then be pulled out and cut at its successive mark. (Pic 4 and Pic 5 and Pic 6)
5. The slack in the main body of rope can then be pulled down over the tail end of the rope. If necessary, for further security, a suitable whip can then be applied at the last insertion point. (Pic 7)